



Dear customer,

Welcome to Synarge Corporation and thank you for choosing us for your valuable security. Please carefully read the following instructions on how to monitor your device and if you have a question don't hesitate to call our marketing person or call office 0735 740 740, email: info@synarge.co.tz.

1. If you want to monitor the device online our free tracking platform is track.synarge.co.tz or download Android/ IOS App. Or simply call the tracker's mobile number and it will reply with google map link. Also get location by SMS. Simply send **669+password** to the tracker and it will reply with google link.
2. **GEO FENCE**, send **211+password** (to activate) and **210+password** (to deactivate). Hence to set location send **0050000 1000** (whereby "1000" is Geo Fence meters).
3. **OVERSPEED ALARM**, send **122+Blank+Speed Limit (Ex. 1120000 120)** The speed range is KM/HR if you put Speed limit '0' it means stop over speed alarm.
4. To set the initial **MILEAGE** send **142+password+M+Mileage (Ex. 1420000M500)**
5. **SHOCK ALARM** To open send **181+password+Shocking Time (Ex. 181000050)** to close shock alarm send **181+password (1810000)**
6. **ENGINE CUT-OFF/ REMOTELY SWITCH OFF A VEHICLE** send **940+password** to cut-off (Ex. 9400000) to release send **941+password (Ex. 9410000)**

All these functions may be done through the online platform or mobile app. Just open your app or track.synarge.co.tz and log in, then follow instructions.